

ECOBOT SCRUBBER 50 CONSUMABLES GUIDE
**RECOMMENDATIONS & INSTRUCTIONS
FOR USE**



GAUSSIAN
ROBOTICS

 
Mopa

Retirar y lavar cada semana. Y reemplazar cada 3 meses.



Labios Rojo Azul

oltear labios cada semanas. Y reemplazar cada 3 meses.



iltro micron

3FFNMBBDBEB
TFNBOBT



iltro 3 micrones

Retirar y lavar diariamente.
Y reemplazar cada semanas.



DD (3/ MBOD)

7MUFBSEDDDBEB
TFNBOBFFNMBBS
DBEBTFNBOBT



olsa de iltrado micrones

aciar y lavar
diariamente. Y reemplazar
cada semanas.



ECOBOT SCRUBBER 75 CONSUMABLES GUIDE

RECOMMENDATIONS & INSTRUCTIONS FOR USE



GAUSSIAN
ROBOTICS

30 Micron Filter

1 every 2 weeks
Remove and wash everyday



150 Micron Filter Bag

1 every 2 weeks
Empty and wash everyday



10 Micron Filter

1 every 2 weeks



 
1 Micron Filter

1 every 2 weeks



Squeegee (Red / Blue)

1 every 3 months
Flip every 2-4 weeks



PADS (Red / White)

1 set every 2 weeks
Flips sides every week



ECOBOT VACUUM 40 CONSUMABLES GUIDE


RECOMMENDATIONS & INSTRUCTIONS FOR USE



GAUSSIAN
ROBOTICS


Dust Bag

 Every 3 - 5 months




HEPA Filter

 Every 6 - 12 months



Side Brush

 Every 3 - 5 months

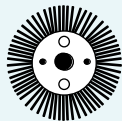

Roller brush (Nylon)

Every 3 - 5 months

